



# BRISA

## RETRACTABLE SCREEN

### OWNER'S GUIDE AND INSTALLATION INSTRUCTIONS

#### **SINGLE PANEL RETRACTABLE DOOR**

Thank you for choosing the LARSON Brisa Single Panel Retractable Door. These instructions describe a **surface mount installation** on a single-hinged door. For help installing, please contact us or visit:

**[www.LARSONdoors.com](http://www.LARSONdoors.com)**

Please read the complete installation instructions before proceeding.

#### **INSTALLATION TOOLS**

Power Drill  
Screwdriver  
No. 2 Phillips Head Driver Bit  
Tape Measure  
Hack Saw (required if door width is less than 32")



Appropriate  
Personal Protective  
Equipment

Installation Questions?  
Replacement Parts?  
**WE CAN ASSIST YOU.**  
**888-483-3768**

Watch the installation  
before you begin.



SCAN ME

# A FRESH APPROACH TO FRESH AIR

Thank you for purchasing a Brisa Retractable Screen Door from LARSON®. Make sure your retractable screen door is the correct size to fit your opening. This retractable screen door is surface-mounted and fits a single inswing or single outswing.



<i>DOOR TYPE</i>	<i>MODEL HEIGHT</i>	<i>FITS DOOR WIDTHS*</i>	<i>FITS INSIDE FRAME HEIGHTS</i>	<i>OUTSIDE DIMENSIONS OF ASSEMBLED SCREEN FRAME</i>
Single	Short	32" - 36" *	78" - 79" (e.g. 6'6" tall doors)	79" H
Single	Standard	32" - 36" *	80" - 81" (e.g. 6'8" tall doors)	81-3/8" H
Single	Tall	32" - 36" *	96" - 97" (e.g. 8'0" tall doors)	97-3/8" H

\* 2 Cuts are required if the door width is less than 32"

If your Brisa sits high or low in the opening you may need additional support under the bottom track. If your frame is tall, you may need to add a filler board at top to close any gaps.


**OPTION 1**  
SITS HIGH IN OPENING



**OPTION 2**  
SITS LOW IN OPENING



**FRAME TOO TALL**  
FILLER BOARD NEEDED

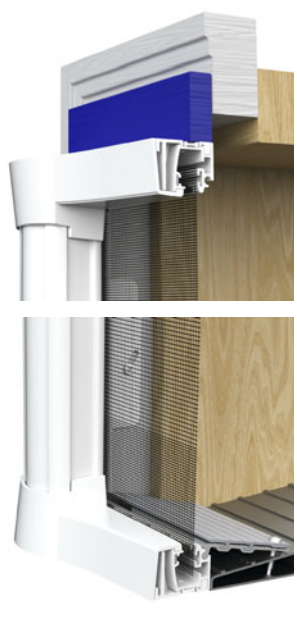




## IMPORTANT

Be sure to read all instructions before installing to ensure proper fit and function. Retractable screen doors are not intended to provide security, or restrain objects, animals, or persons.




## PARTS LIST & PRODUCT TERMINOLOGY

Use the following illustration and terminology to become familiar with your Brisa Retractable Screen Door parts and location. This will be helpful for following installation instructions.

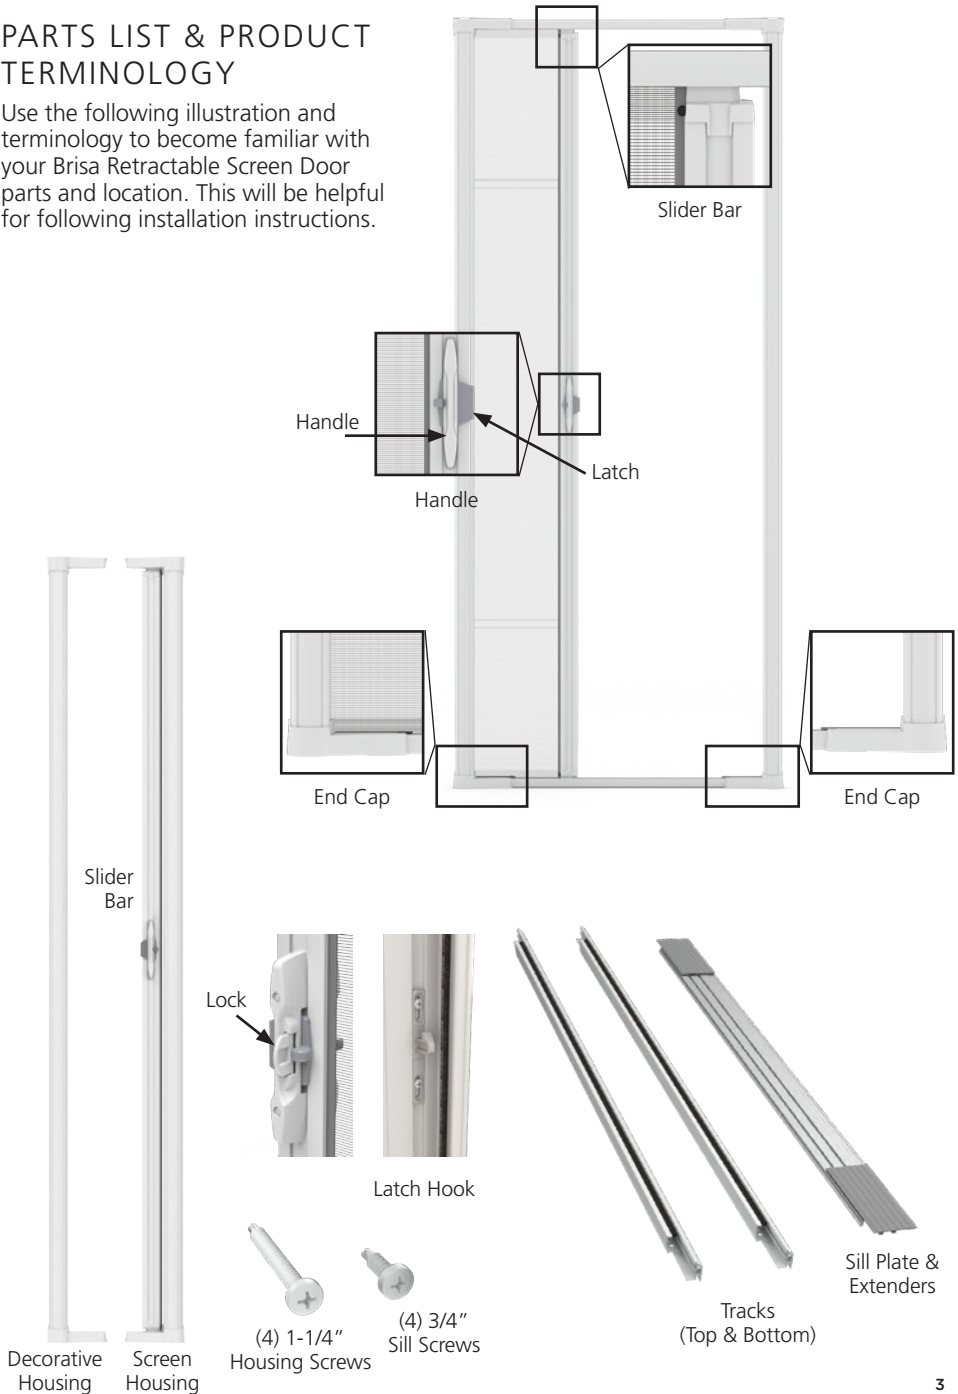

## IDENTIFYING SILL TYPE

Before you begin installing your new retractable screen door, it is important to identify your sill and door type. If you have a short sill or an outswing door, you may need to make some modifications before proceeding to the installation steps.

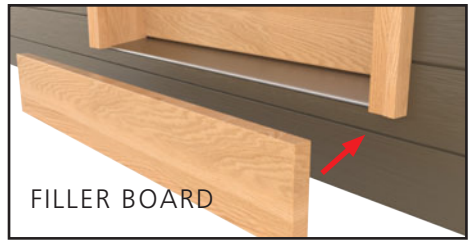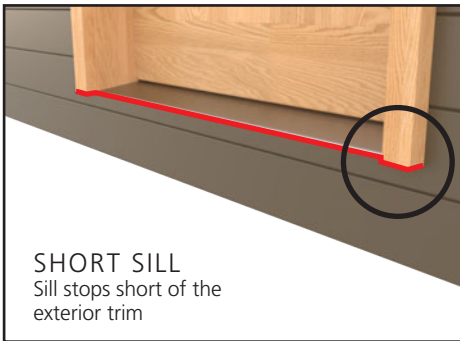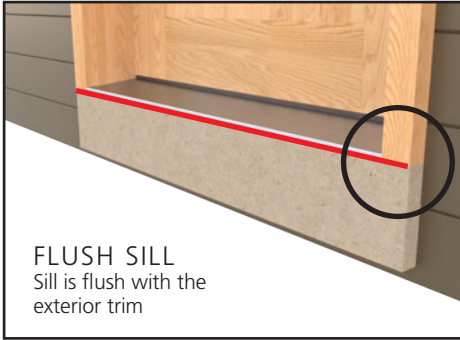

A filler board is not needed when short sills have ground directly underneath the sill.

A filler board (not included) is needed when a short sill sits on top of a step.

Cut the filler board and place under the trim so the top of the filler board is even with the sill.

## IDENTIFYING DOOR TYPE



### RIGHT/LEFT INSWING

Screen assembly will mount outside of home



### RIGHT/LEFT OUTSWING

Screen assembly will mount inside of home

**NOTE:** Handle modifications will be required to move the lock mechanism to the inside of the home. This step should be completed after the retractable screen is installed (see page 10).

## MEASURING DOOR TRIM OPENING

The screen door is designed to fit door openings between 32" and 36" without modifications. If the door opening measures less than 32" wide, the top and bottom tracks will require cutting.

### Narrow Door Modification (If needed)


Measure the current door trim opening and subtract that width from the standard 32" width to calculate the total amount to be cut (example: 32" - 30" for a total of 2" to be cut)

Cut the calculated amount from one end of each track, creating a straight cut.



### EXAMPLE

$$\begin{array}{r} 32'' \text{ standard door width} \\ - 30'' \text{ existing door width} \\ \hline = 2'' \text{ total amount to be} \\ \text{cut from the ends of} \\ \text{the top and bottom} \\ \text{tracks} \end{array}$$

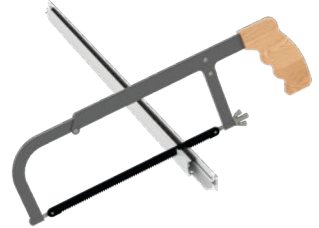

## 1 ASSEMBLE COMPONENTS

a. The Screen Housing should be oriented to the hinge side of the door.

**TIP:** Place housing face down on a soft surface to protect the finish during assembly.

LEFT HINGE DOOR



RIGHT HINGE DOOR






# 1 ASSEMBLE COMPONENTS (CONTINUED)

b. Remove all tape and packaging material. If your opening falls within the standard range of 32" - 36" width, momentarily extend Slider Bar 2", and insert one end of each Track into end of the Screen Housing. Let the Slider Bar retract. With the notch towards the front, insert Track straight and move it all the way to the corner. Make sure the Screen and Slider Bar End Caps thread through the Tracks.

If the opening is less than 32", and the top and Bottom Tracks have been shortened (see page 5), insert the original uncut ends of each Track into end of the Screen Housing.

c. Slide Sill Plate Assembly onto bottom Track.

**NOTE:** Do not deploy screen until it is assembled to doorway.

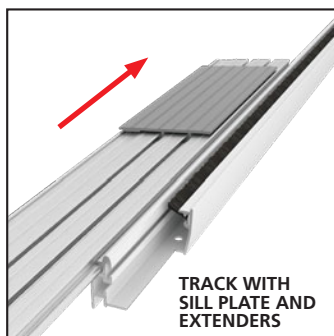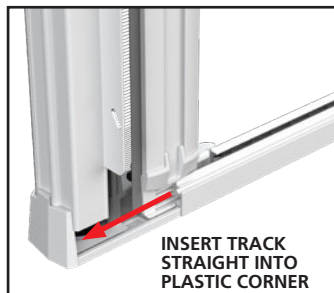
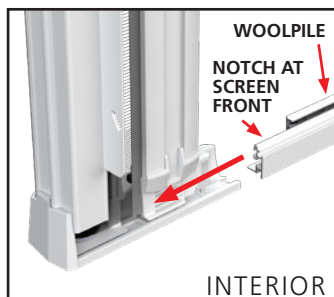




## 1 ASSEMBLE COMPONENTS (CONTINUED)

d. Insert the ends of the top and bottom Tracks into the Decorative Housing.

If the top and bottom Tracks have been shortened (see page 5), insert the cut ends of each Track into the Decorative Housing.

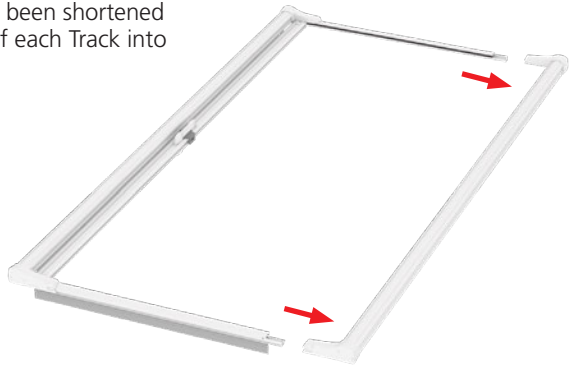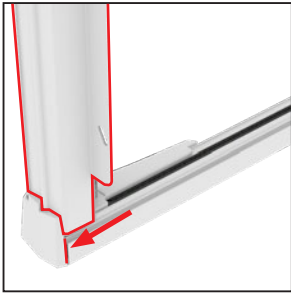


## 2 INSTALL SCREEN


a. Push Decorative Housing and Screen Housing together so the width of the screen frame is at its narrowest.

Place screen assembly onto door sill. (See page 2 for mounting instructions).

For flush and short sills, the bottom edge of the sill should be fully supported by filler board or ground. For long sills, the assembly rests on top of the sill.

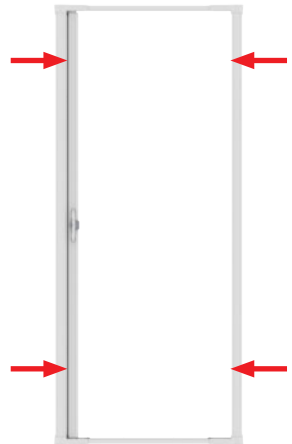

### SURFACE MOUNTING AN INSWING DOOR

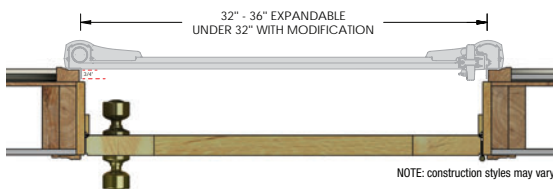

## 2 INSTALL SCREEN (CONTINUED)

b. Extend Housing to left and right evenly until both flanges are snug to the edges of the door jamb.



## 3 SECURE SCREEN

a. Insert screws into the pre-drilled screw holes in the Screen Housing and Decorative Housing flange to hold the frame in place. **Do not over tighten.**



#6 x 1-1/4"  
Housing Screws  
Qty: 4



b. Center the Sill Plate Assembly on the door sill and slide the Sill Plate Extender to each side to fill gaps.

**NOTE:** For a tailored fit, use a scissors to trim each Sill Plate Extender.





### 3 SECURE SCREEN (CONTINUED)

c. Drive Sill Screws approximately 4" from either end, and 4" to the left and right of center.

#6 x 3/4"  
Sill Screws  
Qty: 4



### 4 VERIFY LATCH ALIGNMENT

a. Pull the Slider Bar closed to verify the Latch and Latch Hook align properly.

Using a hand screwdriver, the Latch Hook can be adjusted up or down to make the latching lock more secure.

**TIP:** The Latch Hook comes pre-installed and will face either up or down depending on the chosen Screen Housing orientation (see page 5). If you prefer to operate the screen by always pushing either down or up and, that is not the current operation, remove the two screws that hold the Latch Hook, turn the Latch Hook in the opposite direction and then reinstall the screws and adjust the latch hook as needed.



b. On the handle interior, there is a Handle Lock. The Lock is swiveled to lock or unlock the Handle. When the Screen is covering the opening and the Handle is in the locked position, the screen cannot be unlatched and opened.






Right/Left Outswing

ONLY

### Outswing Door Handle Modification (If needed)

Once the unit is installed, move the gray lock mechanism to the inside of the home.

1. Disengage the handle lock and remove the (2) screws from the handle.
2. Remove both handles (NOTE: the gray latch will be loose).
3. Remove the gray latch from the Slider Bar and reverse it so the logo faces inside the home, then press the latch over the slider bar.
4. Place the handle with the lock on the logo-side of the gray latch.
5. Align and insert the screws through the screw holes. Position the outside handle over the screws and align the (6) small dimples with the corresponding indentations on the inside handle.
6. Tighten the (2) screws.

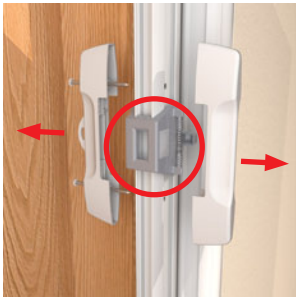

Lock Mechanism

# Frequently Asked Questions

## **Is maintenance required on my Brisa Retractable Screen Door?**

Dirt and debris should be vacuumed out of the tracks periodically. Do not use oily lubricants (i.e., WD40) on the track, as this may attract dirt and hinder operation. If needed, occasional use of a silicone-based lubricant is acceptable.

## **Can Brisa Retractable Screen Doors be installed on stucco homes without a wood door frame?**

No, Brisa is a surface-mount installation that requires a door frame/brick mold/door trim for proper attachment.

## **What if there are gaps above the guide rail or in the corners?**

Brisa is mounted on the surface of a brick mold and may expose small gaps between the opening. A decorative trim or caulk may need to be applied to fill any gaps.

## **What if my retractable screen door retracts slowly, or doesn't deploy at all?**

There could be various reasons for slow retraction or no deployment of the screen:

- Be sure to clean dirt and debris out of the tracks.
- Look for nicks or bends in the track.
- Examine the weatherstrip for displacement or rips that may prevent the screen from operating smoothly.
- Confirm the unit was installed square to the door frame.

If you are still experiencing difficulty, contact our Customer Care Team, or visit [LARSONdoors.com](http://LARSONdoors.com) for assistance.

## **Someone walked through my screen and now it does not function properly.**

If the screen is frayed, has holes or is creased, or the track is bent, contact our Customer Care Team at [LARSONdoors.com](http://LARSONdoors.com) to order a replacement part.

## **Once the screen has been assembled, how do I remove the top and bottom Tracks?**

Remove the screen from the door opening and lay it on a soft, clean surface. Locate the plastic corner End Caps that are found at each end of the Decorative and Screen Housings. On the outer ends each plastic End Cap has a small flexible tab. Using a flat tip screwdriver, gently lift the small flexible tab while lightly pulling the track out of the plastic End Cap. Repeat for each end.

## **What about wind, weather and the intended use of my Brisa Retractable Screen Door?**

Brisa provides insect protection and supports fresh, natural ventilation. The screen should not be left continually open, be persistently exposed to wind, sun, rain or other harsh conditions. The screen is for insect protection and is not intended to provide security or restrain objects, animals or persons. Retract the screen when not needed and use the screen only during low-wind conditions. Before retracting the screen, check that the edges of the screen fabric are riding completely inside the tracks and guide rails. If necessary, use your fingers or a soft smooth instrument to position the edges of the fabric inside the guide rails before retracting the screen.

### **Limited Lifetime Warranty**

LARSON Brisa Retractable Screen Doors include a Limited Lifetime Warranty. Damage to the screen such as tears are not covered under the warranty. Labor cost, reinstallation fees are not covered under the warranty.

### **Registration**

Visit [www.LARSONdoors.com/Register](http://www.LARSONdoors.com/Register) to register your product.